

VISTA-128BP

User Guide Read Me First

This document outlines the change made to the user bypass functions of the VISTA-128BP. Please use this document along with your user guide to understand and perform the system operations of the system.

Zones Remaining Bypassed After Disarming

The system provides an option to allow all manually bypassed zones to remain bypassed upon disarming (**USER CODE + OFF**) of the partition. This option must be programmed by your installer. Check with your installer to see if this option has been enabled.

NOTES:

For each partition in which the option is enabled, the **USER CODE + OFF** will no longer unby-pass zones. To unby-pass ALL zones, you must enter **USER CODE + # + 64**. To unby-pass zones INDIVIDUALLY, you must enter **USER CODE + 6 + zone number**.

Any zone that was automatically bypassed by the system will be unby-passed upon disarming of the system (e.g., STAY mode, Auto-STAY, etc.).

Vent zones and zones bypassed by a programmed Auto-Bypass schedule (Timed Driven Event) are considered "manual bypasses" and will not be unby-passed upon disarming the system.

Zones that were in a bypassed state at the time a System Shutdown is sent from the Compass Downloading software, will be unby-passed when the System Shutdown is removed.

Viewing Bypassed Zones

The system allows you to view zones that are presently bypassed regardless of the status of the partition (armed, disarmed, etc.). To view the bypassed zones, enter **USER CODE + # + 84**. The system automatically scrolls all the zones presently bypassed.

Honeywell

165 Eileen Way, Syosset, New York 11791

Copyright © 2005 Honeywell International Inc.

www.honeywell.com/security



K5895XX 2/05 Rev A